


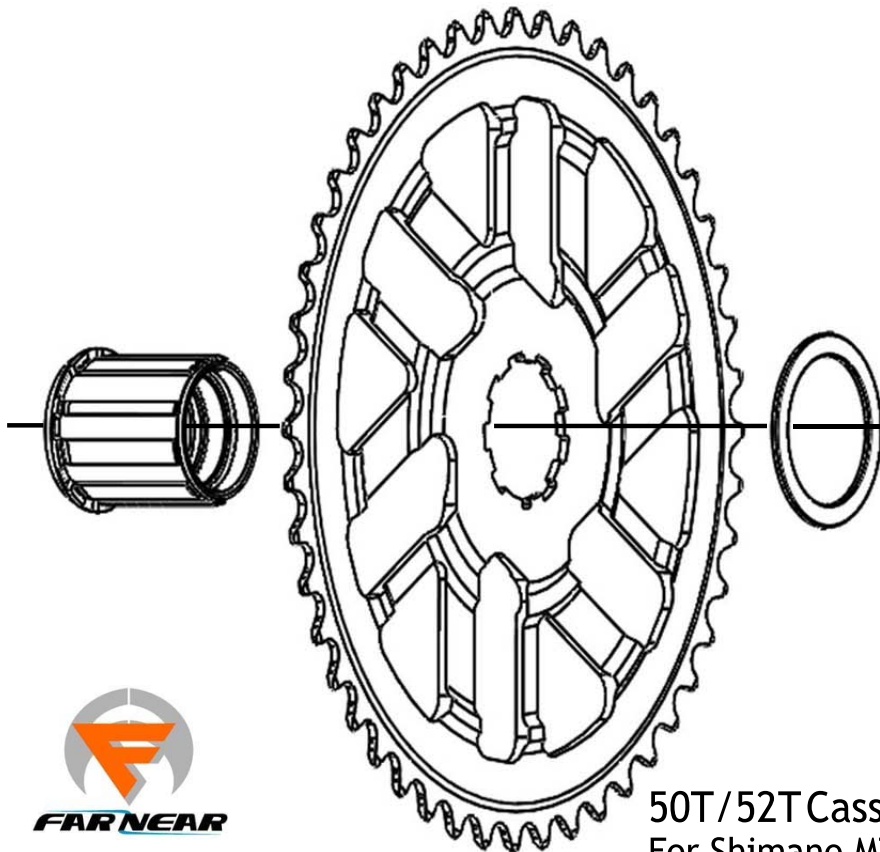


50T/52T Cassette Sprocket Installation For Shimano MTB 11Speed XT M8000 Only

Requires removal of the 15T & 17T cogs, Add the 16T cog to replace it. Use the spacer in front of the 50T / 52T cog.
Cassette Progressions:

*11-13-16-19-21-24-28-32-37-40-spacer-50T or *11-13-16-19-21-24-28-32-37-42-spacer-50T

*11-13-16-19-21-24-28-32-37-42-spacer-52T or *11-13-16-19-21-24-28-32-37-46-spacer-52T

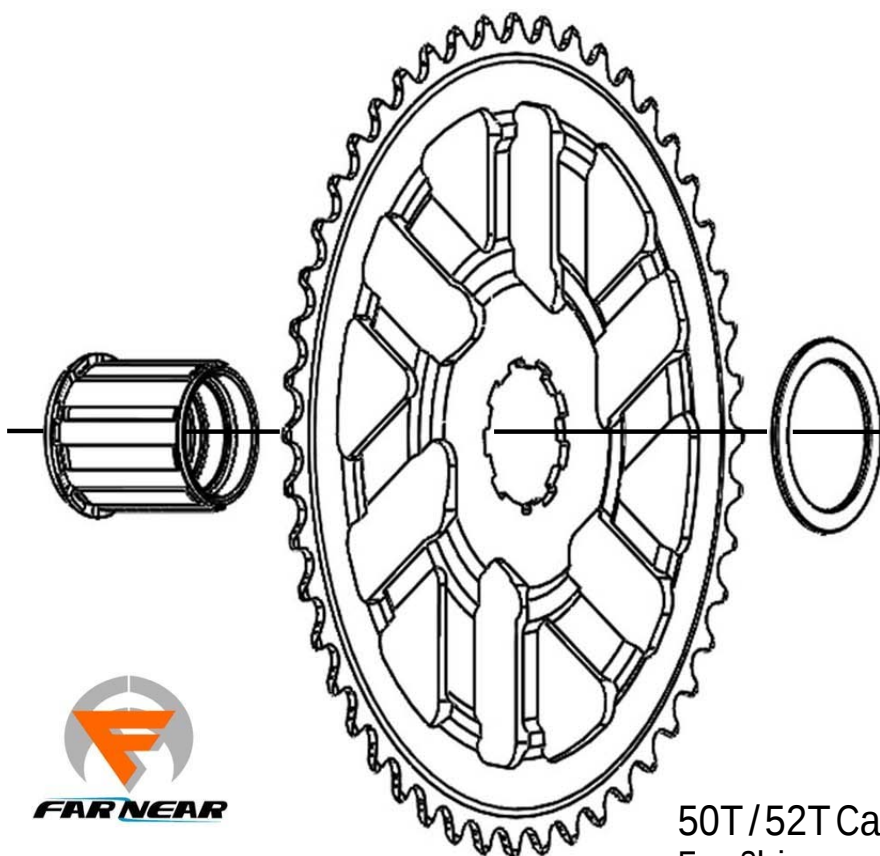

50T/52T Cassette Sprocket Installation For Shimano MTB 11Speed XT M8000 Only

Requires removal of the 15T & 17T cogs, Add the 16T cog to replace it. Use the spacer in front of the 50T / 52T cog.
Cassette Progressions:

*11-13-16-19-21-24-28-32-37-40-spacer-50T or *11-13-16-19-21-24-28-32-37-42-spacer-50T

*11-13-16-19-21-24-28-32-37-42-spacer-52T or *11-13-16-19-21-24-28-32-37-46-spacer-52T